




SHUFFLE TECH™

Flush Mount Installation Manual

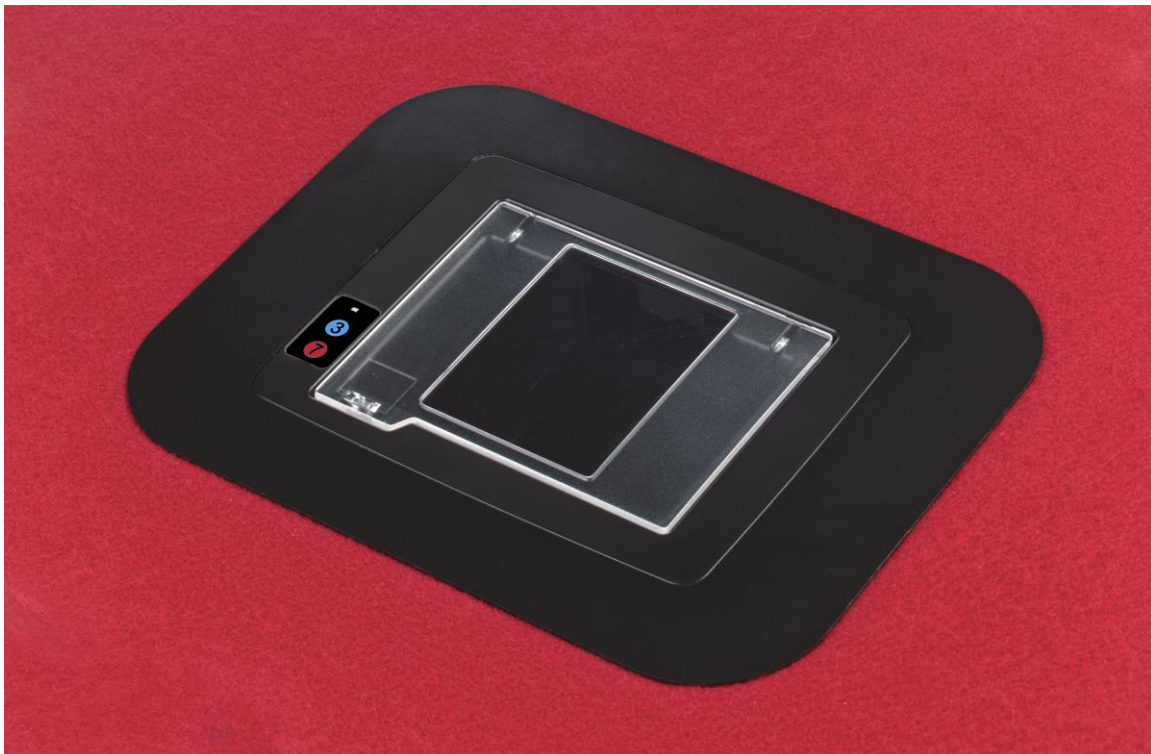


For assistance:
email: info@shuffle-tech.eu
website: <http://www.shuffle-tech.eu>
Software Station, 2321 Szigetbecse,
Fazekas Mihaly u. 29 / HUNGARY

Please read this Installation
Manual before installing
the unit.

Flush Mount Installation

1. Determine the location on the table by using the template. Make sure there are no obstructions at the bottom of the table such as support beams. As shown on the template, you will cut a hole 9.5" (254mm) long x 7.375" (187mm) wide.
2. Trace X mark inside the template with a marker.
3. Remove template.
4. Cut the felt along the marker.

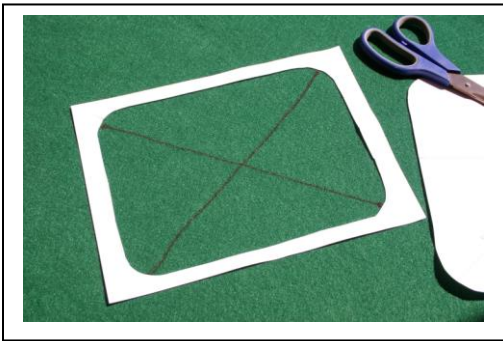

5. Fold the felt outward and tape it securely to table.
6. Trace along the template with the marker.
7. Cut the plywood using a jigsaw or a router. Shorter sides need to be cut in a 45-degree angle from the bottom surface (see illustration).



-
8. Fold the felt inward and place the faceplate on the table.
 9. Position 4 flexible metal straps to the studs with the nuts on the bottom of the faceplate; do not tighten.
 10. Bend the flexible metal straps away from the shuffler.



11. Tighten metal straps to table, and then tighten bolts on faceplate.
12. Place the picture hanging loops 1” away from the edge of the plywood in the center.
13. Pull the felt and secure with staples.
14. Tighten nuts to secure the faceplate to the table.
15. Insert bolts through the bottom plate from the bottom and tighten with nuts.
16. Hook the turnbuckles to the brackets.
17. Connect the base to the table with turnbuckles.
18. Place the Shuffler on to the base plate and tighten turnbuckles.

Warning

We recommend having a professional carpenter or a custom poker table maker install the flush mount kit for you. Shuffle Tech is not responsible for damages to the table or the shuffler caused during installation.

Required Tools

Utility Knife

Masking Tape

Marker

Drill

Jigsaw or Router (Jigsaw must have capability of adjusting to 45 degree angle) Staple gun

Screwdrivers

Wrench

Included in the Flush Mount Kit

Faceplate (1)

Flexible Metal Straps (4)

Wood Screws (8)

Picture Hanging Loops (2)

Turnbuckles (2)

Bolts (2)

Base plate (1)

To be downloaded from our website

(<http://shuffle-tech.eu/downloads/>)

Template (1)

Instruction Manual (1)

Service/General Information

Software Station Bt.

2321 Szigetbecse, Fazekas Mihály u. 29.

HUNGARY

Email: info@shuffle-tech.eu

Website: www.shuffle-tech.eu